


GOBI HUMMER H2 REAR DOOR LADDER INSTRUCTIONS

INSTRUCTIONS APPLY TO BOTH RIGHT AND LEFT LADDERS

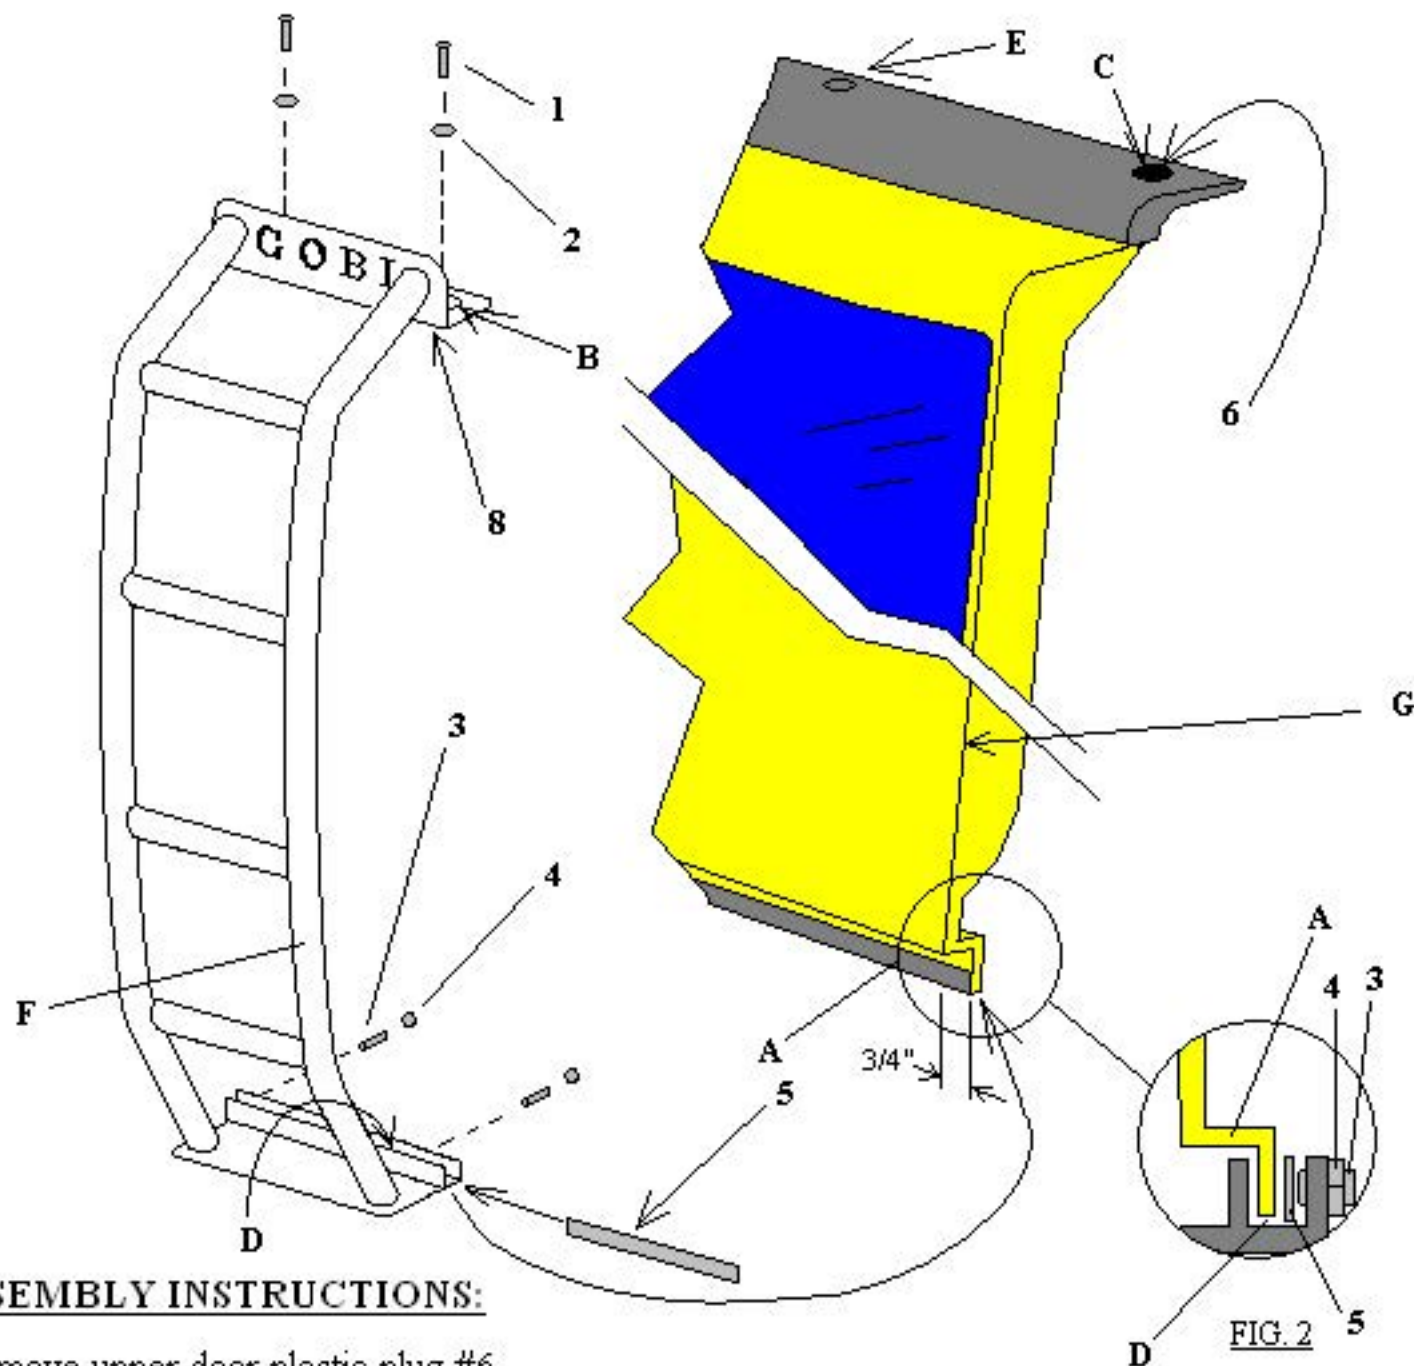

ASSEMBLY INSTRUCTIONS:

- 1) Remove upper door plastic plug #6
- 2) Insert stainless steel screws #3 and nuts #4 to bottom of ladder. Make sure screws do not enter ladder slot "D" at this time
- 3) Place ladder slot "D" onto lower door lip "A" of rear door approximately 3/4" (19.0mm) from right side edge. Make sure pinch plate #5 rests on the inside of door lip "A" as shown in Fig. 2
- 4) Slide upper end of ladder #8 over the top of rear door and align ladder bolt hole "B" with rear door hole "C" and insert stainless steel screw #1, washer #2 and bolt down tight using washer, lock washer and nut provided.
- 5) Align ladder rail "F" with door edge "G" by sliding the lower part of the ladder right or left along the lower door lip "A" once visually aligned completely tighten both lower ladder screws #3 then nut #4
- 6) Drill a 5/16" (7.87mm) hole through second bolt hole "E" of ladder upper bracket into and through upper door. Insert screw, washer and bolt down tight using washer, lock washer and nut provided. Be sure all bolts and nuts are completely tightened at this time.