

## GOBI STEALTH RACK MAXTRAX SIDE MOUNT ATTACHMENT INSTALLATION INSTRUCTIONS

### Guidelines:

When using Load Carriers and Accessories, the user must understand the precautions. The points listed below will assist you in using the rack /carrier system and will encourage safety.

- For quality fits and safety, use only the recommended rack or accessory. Do not assume an accessory will fit, always check with dealer when obtaining new accessories. Use only approved accessories on load carriers. Using other brands will void your warranty.
- Make sure all knobs, bolts, screws, straps, and locks are firmly attached, tightened and locked before every trip. Knobs, bolts, screws, straps, and locks must be periodically inspected for signs of wear, corrosion, and fatigue. Check your load at stops during the trip to insure continued fastening security.
- Check local and state laws governing projection of objects beyond the width of a vehicle. **Be aware of the width and height of your cargo since low clearance branches, bridges, and parking garages can affect the load** All cargo will affect the vehicle's driving behavior. Never drive with any lock, knob, or rack in an open or unlocked position. All long loads such as, but not limited to sailboards, surfboards, kayaks, canoes, and lumber must be tied down front and rear to the bumpers or tow hooks, of the vehicle.
- Remove your rack accessories when they are not in use, before entering car washes, prior to taking in your vehicle for service, and whenever clearance may be an issue.
- All locks must be turned and moved periodically to insure smooth operation. Use graphite or similar dry lubricant to help this. Locks are designed to deter vandalism and theft. Remove valuable gear if your vehicle is unattended for an extended period. Place at least one key in the glove compartment.
- For safety to your vehicle and rack system, obey all posted speed limits and traffic cautions. Adapt your speed to the conditions of the road and the load being carried.
- Do not use load carriers and accessories for purposes other than those for which they were designed. Do not exceed their carrying capacity.
- Consult with your dealer if you have any questions regarding the operations and limits of this product. Review all instructions carefully.

## GOBI STEALTH RACK MAXTRAX SIDE MOUNT ATTACHMENT INSTALLATION INSTRUCTIONS

### Included in kit

Letter	Description	Location	Quantity
A	GOBI MAXTRAX ROOF RACK SIDE MOUNT ATTACHMENT	Main box	2

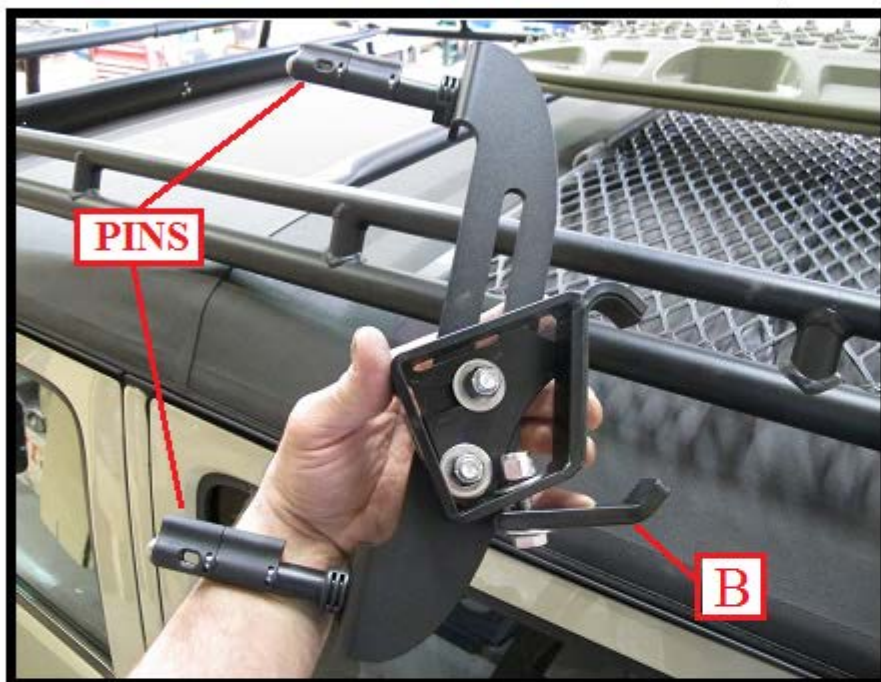


**Read all instructions carefully prior to installation.**

**NOTE:** Maxtrax Recovery Board Mounting pin Set must be purchased separately



## GOBI STEALTH RACK MAXTRAX SIDE MOUNT ATTACHMENT INSTALLATION INSTRUCTIONS

**Fig. 1**

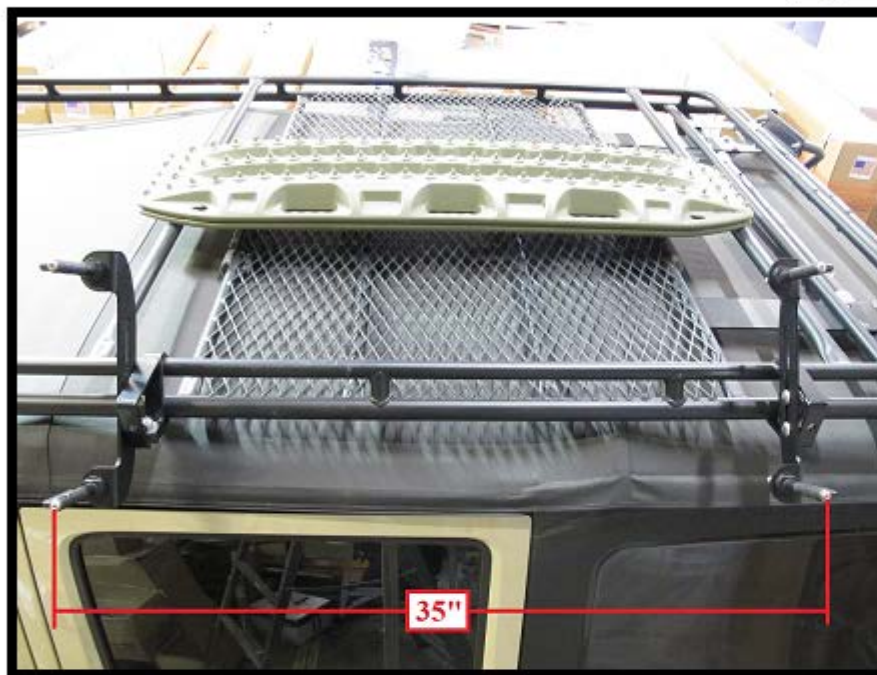
Prior to installation make certain you have the Maxtrax mounting pin set in hand which is available from many internet sites.

Remove the Gobi Maxtrax attachments from your packaging and first install all four Maxtrax pins shown in Fig. 1 and 2. Make certain to orient each pin in the same direction as shown.

**Fig. 2**

Determine which side of the Gobi rack you intend to install the Maxtrax attachment to then swing out clamp plate (B) shown in Fig. 1 and 2. Hang the Gobi Maxtrax attachment as shown in Fig. 2 over the top of roof rack rail then swing clamp under lower rail as can be seen in Fig. 4.

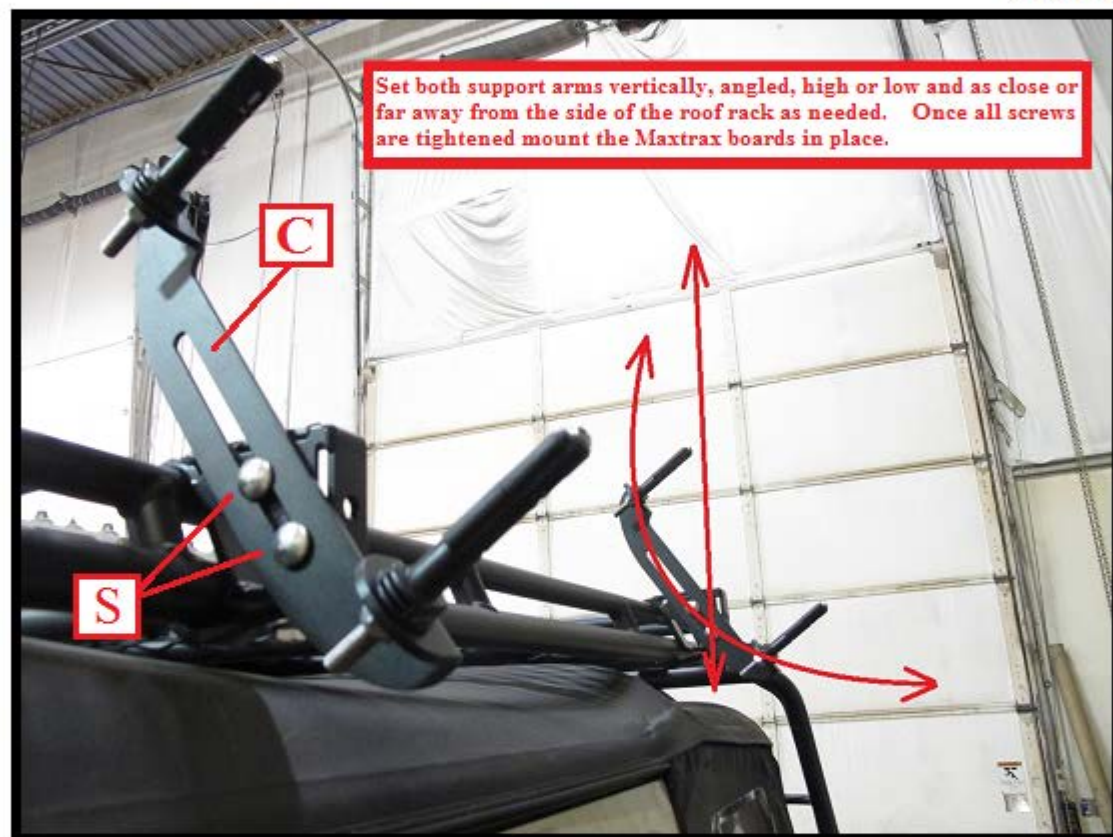
## GOBI STEALTH RACK MAXTRAX SIDE MOUNT ATTACHMENT INSTALLATION INSTRUCTIONS

**Fig. 3**

Position the Maxtrax attachments 35 inches apart center pin to center pin as shown in Fig. 3. Then fully tighten clamps (B) in place using two 9/16" box or open end wrenches shown in Fig. 4.

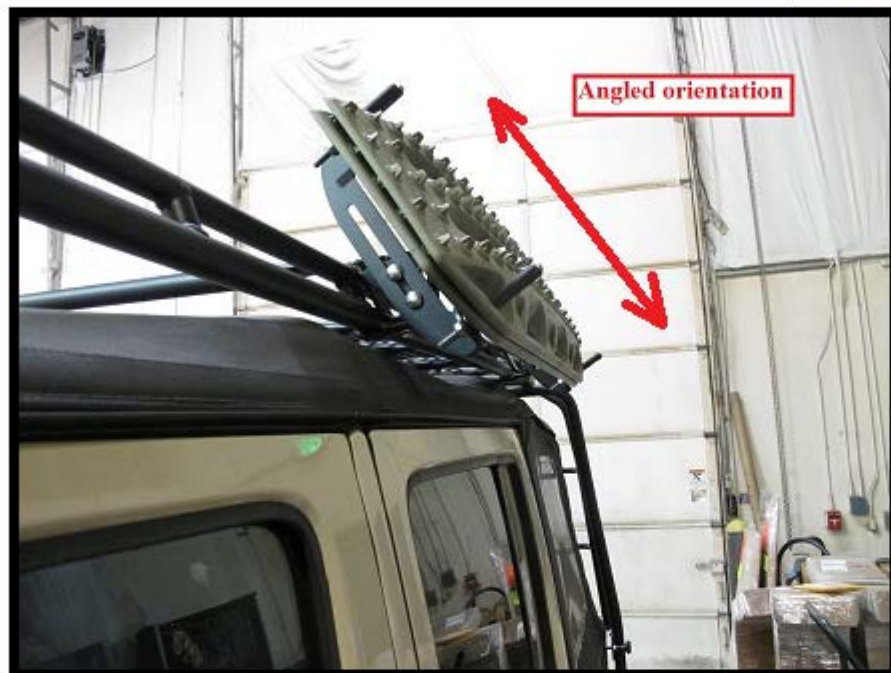
**Fig. 4**

## GOBI STEALTH RACK MAXTRAX SIDE MOUNT ATTACHMENT INSTALLATION INSTRUCTIONS

**Fig. 5**

After the two Maxtrax attachments are firmly secured in place. Loosen two carriage screws (S) using a 9/16" socket drive and position both support arms (C) as needed for your specific cargo requirements. Make certain to adjust both arms equally then fully tighten all screws firmly.

## GOBI STEALTH RACK MAXTRAX SIDE MOUNT ATTACHMENT INSTALLATION INSTRUCTIONS

**Fig. 6**

Install either 2 or 4 Maxtrax Tred boards over the four pins then secure in place by rotating each pin head 90 degrees. Figure 6 shows an angled orientation.

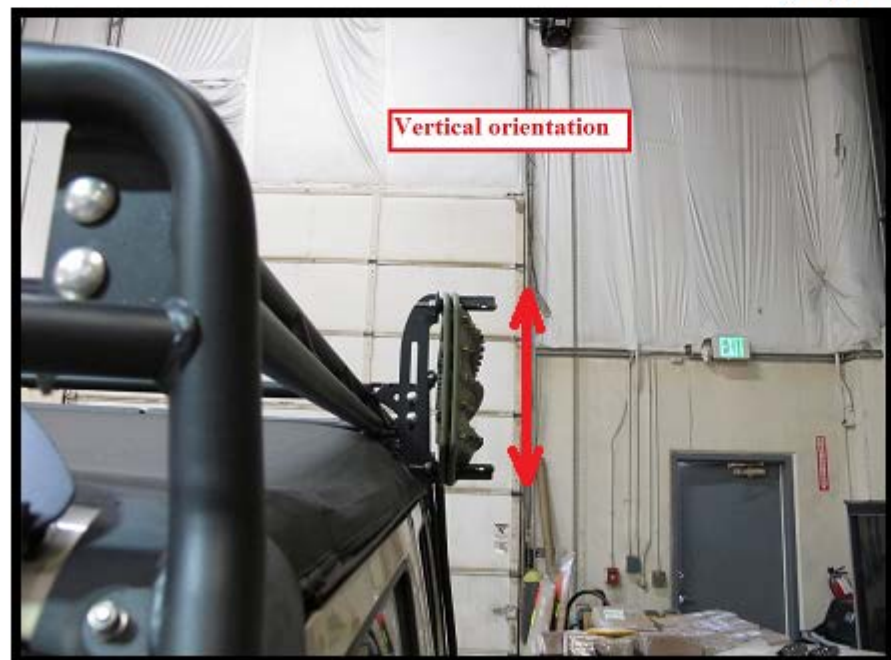
**Fig. 7**

Figure 7 shows a vertical orientation.

## GOBI STEALTH RACK MAXTRAX SIDE MOUNT ATTACHMENT INSTALLATION INSTRUCTIONS



**INSTALLATION COMPLETED**