

GOBI TOYOTA LAND CRUISER FJ 40 ROOF RACK LIGHT BAR WINDSHIELD CLAMP INSTALLATION INSTRUCTIONS

Guidelines:

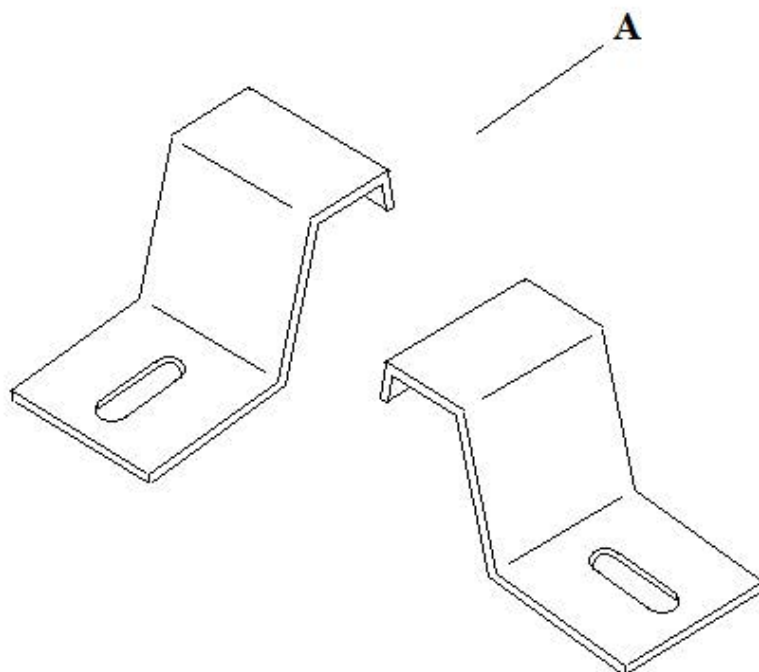
When using Load Carriers and Accessories, the user must understand the precautions. The points listed below will assist you in using the rack /carrier system and will encourage safety.

- For quality fits and safty, use only the recommended rack or accessory. Do not assume an accessory will fit, always check with dealer when obtaining new accessories. Use only approved accessories on load carriers. Using other brands will void your warrenty.
- Make sure all knobs, bolts, screws, straps, and locks are firmly attached, tightened and locked before every trip. Knobs, bolts, screws, straps, and locks must be periodically inspected for signs of wear, corrosion, and fatigue. Check your load at stops during the trip to insure continued fastening security.
- Check local and state laws governing projection of objects beyound the width of a vehicle. **Be aware of the width and height of your cargo since low clearance branches, bridges, and parking garages can affect the load** All cargo will affect the vehicle's driving behavior. Never drive with any lock, know, or rack in an open or unlocked position. All long loads such as, but not limited to sailboards, surfboards, kayaks, canoes, and lumber must be tied down front and rear to the bumpers or tow hooks, of the vehicle.
- Remove your rack accessories when they are not in use, before intering car washes, prior to taking in your vehicle for service, and whenever clearance may be an issue.
- All locks must be turned and moved periodically to insure smooth operation. Use graphite or similar dry lubricant to help this. Locks are designed to deter vandalism and theft. Remove valuable gear if your vehicle is unattended for an extended period. Place at least one key in the glove compartment.
- For safety to your vehicle and rack system, obey all posted speed limits and traffic cautions. Adapt your speed to the conditions of the road and the load being carried.
- Do not use load carriers and accessories for purposes other than those for which they were designed. Do not exceed their carrying capacity.
- Consult with your dealer if you have any questions regarding the operations and limits of this product. Review all instructions carefully.

"READ ALL INSTRUCTIONS CAREFULLY PRIOR TO INSTALLATION"

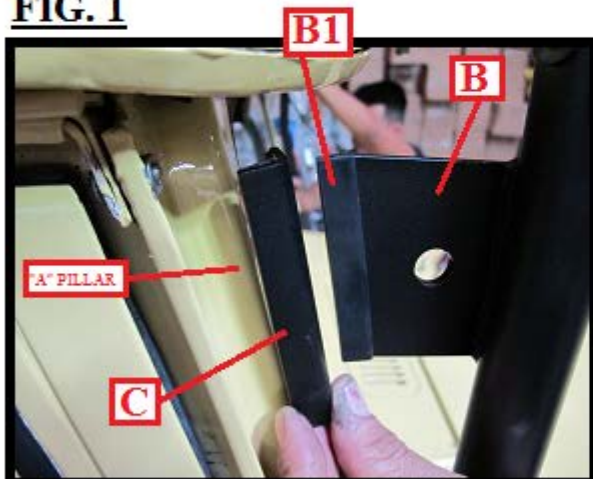
**GOBI TOYOTA LAND CRUISER FJ 40 ROOF RACK
LIGHT BAR WINDSHIELD CLAMP
INSTALLATION INSTRUCTIONS****Included in kit**

Letter	Description	Location	Quantity
A	GOBI LIGHT BAR WINDSHEILD CLAMPS	Main box	1
B	HARDWARE LIST CONTENTS: 2- 3/8-16 X 1" SS Carriage screws 2- 3/8" SS Flat washers 2- 3/8" SS Nylock nuts 2- Black wear plates adhesived backed 2- Brown wear strips	Bag #1	1 ea.



"READ ALL INSTRUCTIONS CAREFULLY PRIOR TO INSTALLATION"

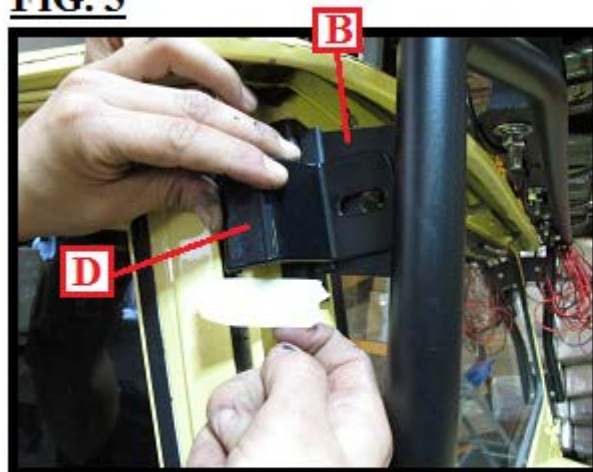
GOBI TOYOTA LAND CRUISER FJ 40 ROOF RACK LIGHT BAR WINDSHIELD CLAMP INSTALLATION INSTRUCTIONS

FIG. 1

Remove from Bag #1 a black rubber strip (B1) and slide over the end of the light bar stabilizer plate (B) as shown in Fig. 1. Clean the "A" pillar adjacent to the stabilizer plate (B) with denatured alcohol. Remove a black aluminum wear plate (C) from Bag #1 and peel off the adhesive protective film from the plate and set on the "A" pillar as shown with the wider edge facing the windshield, press down firmly for 30 seconds and apply the same procedure to the opposite side of the light bar.

FIG. 2

Remove from your hardware box one light bar clamp (D) as shown in Fig. 2

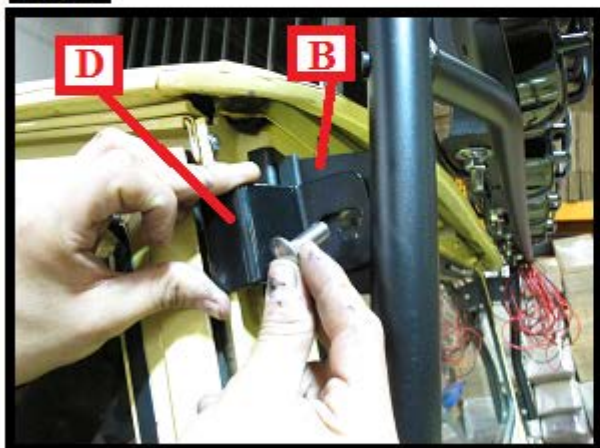
FIG. 3

Place light bar clamp (D) as shown in Fig. 3 inside door jamb and onto the windshield stabilizer plate (B). Hold in place while you apply a masking tape marker to indicate where the bottom of the clamp will rest.

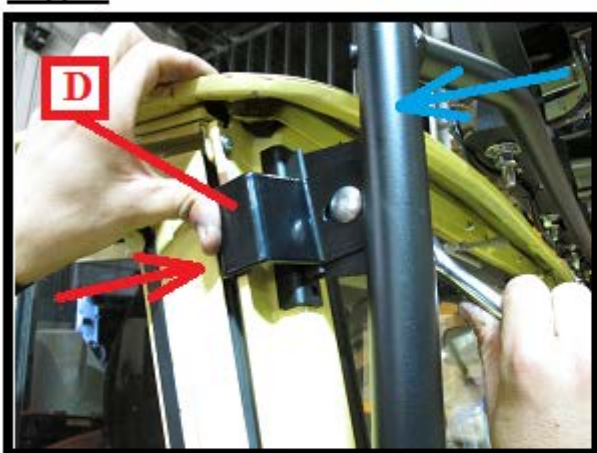
FIG. 4

Remove clamp (D) and clean the area above the masking tape with denatured alcohol. Remove a single piece of brown wear tape (W) from Bag #1 peel off the protective cover and apply as shown in Fig. 4 to cover the inside and outside of the door jamb to protect the paint from wear. Apply the same procedure to the opposite side.

GOBI TOYOTA LAND CRUISER FJ 40 ROOF RACK LIGHT BAR WINDSHIELD CLAMP INSTALLATION INSTRUCTIONS

Fig. 5**Fig. 6**

Remove from Bag #1 a single 3/8" carriage screw and slide through clamp (D) then into stabilizer plate (B) as shown in Fig. 5. Remove from Bag #1 a 3/8" flat washer and 3/8" nylock nut and thread onto the 3/8" carriage screw as shown in Fig. 6 snug down in place but do not fully tighten at this time. Apply the same procedure to the opposite side.

Fig. 7**Fig. 8**

Push and hold clamp (D) in the direction of the red arrow while pulling back the light bar towards the windshield as shown by the blue arrow with the help of another person and hold in place. Fully tighten the 3/8" nylock nut using a 9/16" socket wrench. Apply the same procedure to the opposite side.

Gobi FJ 40 roof rack Windshield clamp fully installed.