

# GOBI STEALTH RHINO DOME 1300 REAR AWNING BRACKETS

## INSTALLATION INSTRUCTIONS

### Guidelines:

When using Load Carriers and Accessories, the user must understand the precautions. The points listed below will assist you in using the rack /carrier system and will encourage safety.

- For quality fits and safty, use only the recommended rack or accessory. Do not assume an accessory will fit, always check with dealer when obtaining new accessories. Use only approved accessories on load carriers. Using other brands will void your warrenty.
- Make sure all knobs, bolts, screws, straps, and locks are firmly attached, tightened and locked before every trip. Knobs, bolts, screws, straps, and locks must be periodically inspected for signs of wear, corrosion, and fatigue. Check your load at stops during the trip to insure continued fastening security.
- Check local and state laws governing projection of objects beyound the width of a vehicle. **Be aware of the width and height of your cargo since low clearance branches, bridges, and parking garages can affect the load** All cargo will affect the vehicle's driving behavior. Never drive with any lock, know, or rack in an open or unlocked position. All long loads such as, but not limited to sailboards, surfboards, kayaks, canoes, and lumber must be tied down front and rear to the bumpers or tow hooks, of the vehicle.
- Remove your rack accessories when they are not in use, before intering car washes, prior to taking in your vehicle for service, and whenever clearance may be an issue.
- All locks must be turned and moved periodically to insure smooth operation. Use graphite or similar dry lubricant to help this. Locks are designed to deter vandalism and theft. Remove valuable gear if your vehicle is unattended for an extended period. Place at least one key in the glove compartment.
- For safety to your vehicle and rack system, obey all posted speed limits and traffic cautions. Adapt your speed to the conditions of the road and the load being carried.
- Do not use load carriers and accessories for purposes other than those for which they were designed. Do not exceed their carrying capacity.
- Consult with your dealer if you have any questions regarding the operations and limits of this product. Review all instructions carefully.

# GOBI STEALTH RHINO DOME 1300 REAR AWNING BRACKETS

## INSTALLATION INSTRUCTIONS

Included in kit

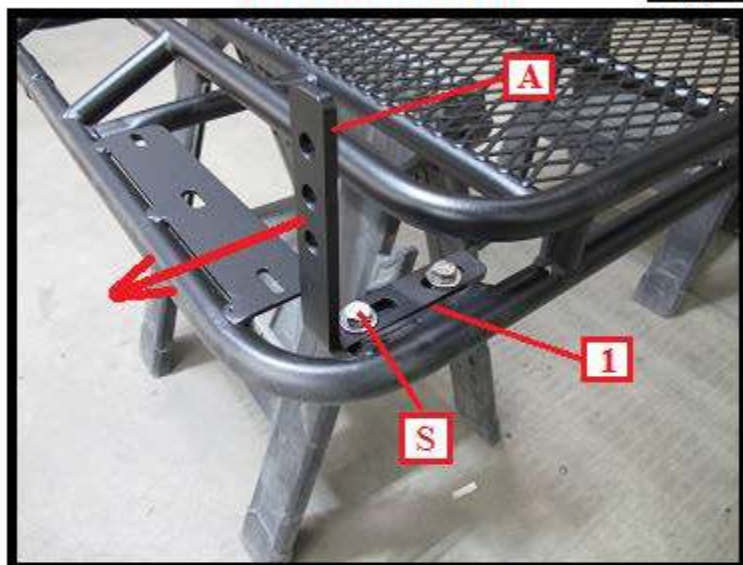
Letter	Description	Location	Quantity
A	GOBI STEALTH RHINO DOME 1300 REAR AWNING BRACKETS	Main box	2
B	GOBI RHINO 1300 AWNING BRACKET MOUNTING HARDWARE CONTENTS: 4- 3/8-16 x 1-1/4" SS hex head screw 8- 3/8" SS Flat washer 4- 3/8" SS Nylock nuts 1- Pack of Anti-Seize lubricant	Bag #1	1





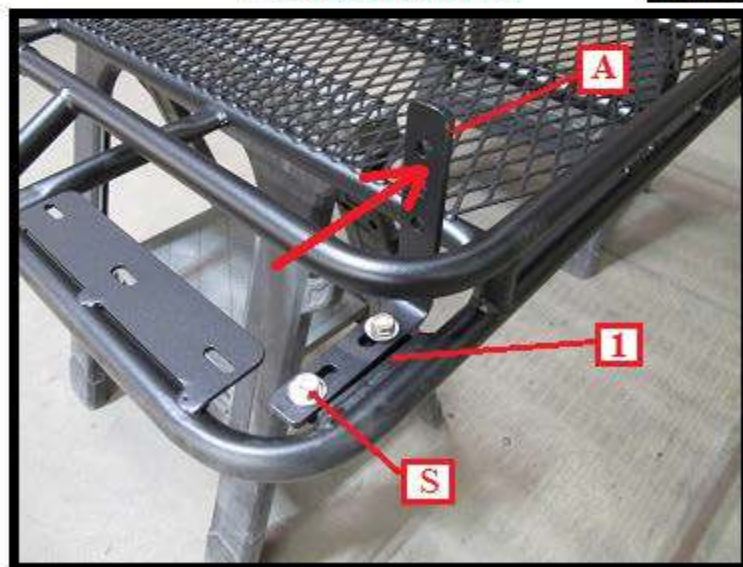
## GOBI STEALTH RHINO DOME 1300 REAR AWNING BRACKETS

### INSTALLATION INSTRUCTIONS

**INSTALL POSITION #1****Fig. 1**

Choose from the two mounting positions shown in Fig. 1 and Fig. 2. Fig. 1 sets the awning closer to the rear of the vehicle and Fig. 2 sets the awning further away from the rear of the vehicle.

Use the supplied longer 3/8-16 x 1-1/4" hex head screws, flat washers and nuts (S) and install the Gobi Rhino 1300 Dome awning brackets (A) as shown in Fig. 1 or Fig. 2.

**INSTALL POSITION #2****Fig. 2**

Place screws through the base of awning bracket (A) then through Gobi rack flange (1) and through the Gobi support bracket (*not shown*). Attach brackets to both rear passenger and driver roof rack flanges and support brackets. Align brackets (A) with the rear of the vehicle and fully tighten in place.

# **GOBI STEALTH RHINO DOME 1300 REAR AWNING BRACKETS**

## **INSTALLATION INSTRUCTIONS**



**INSTALLATION COMPLETED**