

## GOBI JEEP RENEGADE 2015-19 REAR DOOR LADDER INSTALLATION INSTRUCTIONS

*The Gobi ladder must be inspected before each use to make certain attachments are secure, and for evidence of Wear. Misuse of the ladder or failure to observe the manufacturer's instructions as to installation, proper Attachment and maintenance will void any warranties that may be implied by law.*

# CAUTION

"LADDER IS TO BE TRAVERSED UPON  
ONLY

WHEN THE REAR DOOR TAIL GATE  
AND LIFT GATE ARE FULLY  
CLOSED AND LOCKED"

**CAUTION: USE ANTI-SEIZE LUBRICANT ON ALL SCREWS**

## GOBI JEEP RENEGADE 2015-19 REAR DOOR LADDER INSTALLATION INSTRUCTIONS

### Guidelines:

When using Load Carriers and Accessories, the user must understand the precautions. The points listed below will assist you in using the rack /carrier system and will encourage safety.

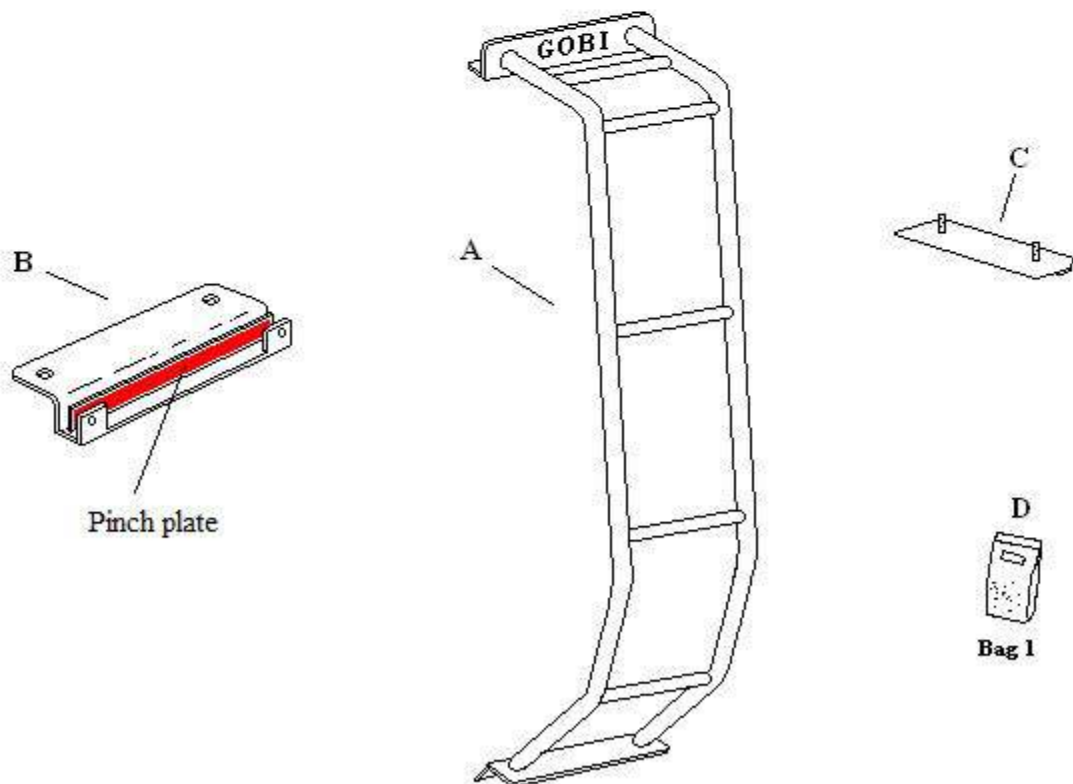
- For quality fits and safty, use only the recommended rack or accessory. Do not assume an accessory will fit, always check with dealer when obtaining new accessories. Use only approved accessories on load carriers. Using other brands will void your warrenty.
- Make sure all knobs, bolts, screws, straps, and locks are firmly attached, tightened and locked before every trip. Knobs, bolts, screws, straps, and locks must be periodically inspected for signs of wear, corrosion, and fatigue. Check your load at stops during the trip to insure continued fastening security.
- Check local and state laws governing projection of objects beyound the width of a vehicle. **Be aware of the width and height of your cargo since low clearance branches, bridges, and parking garages can affect the load** All cargo will affect the vehicle's driving behavior. Never drive with any lock, know, or rack in an open or unlocked position. All long loads such as, but not limited to sailboards, surfboards, kayaks, canoes, and lumber must be tied down front and rear to the bumpers or tow hooks, of the vehicle.
- Remove your rack accessories when they are not in use, before intering car washes, prior to taking in your vehicle for service, and whenever clearance may be an issue.
- All locks must be turned and moved periodically to insure smooth operation. Use graphite or similar dry lubricant to help this. Locks are designed to deter vandalism and theft. Remove valuable gear if your vehicle is unattended for an extended period. Place at least one key in the glove compartment.
- For safety to your vehicle and rack system, obey all posted speed limits and traffic cautions. Adapt your speed to the conditions of the road and the load being carried.
- Do not use load carriers and accessories for purposes other than those for which they were designed. Do not exceed their carrying capacity.
- Consult with your dealer if you have any questions regarding the operations and limits of this product. Review all instructions carefully.

**CAUTION: USE ANTI-SEIZE LUBRICANT ON ALL SCREWS**

## GOBI JEEP RENEGADE 2015-19 REAR DOOR LADDER INSTALLATION INSTRUCTIONS

### Included in kit

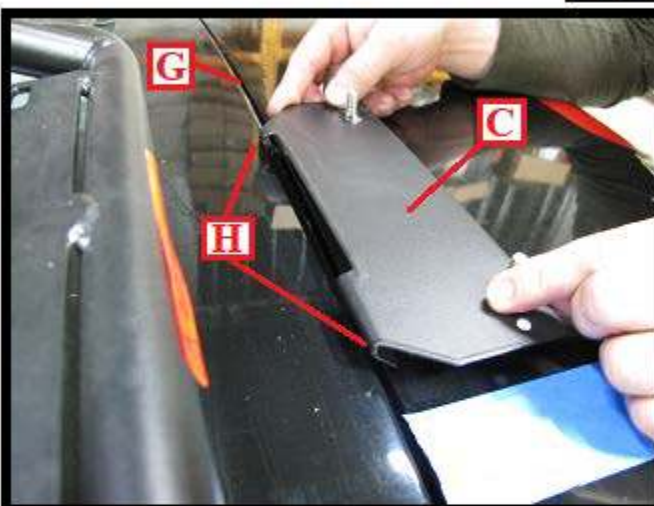
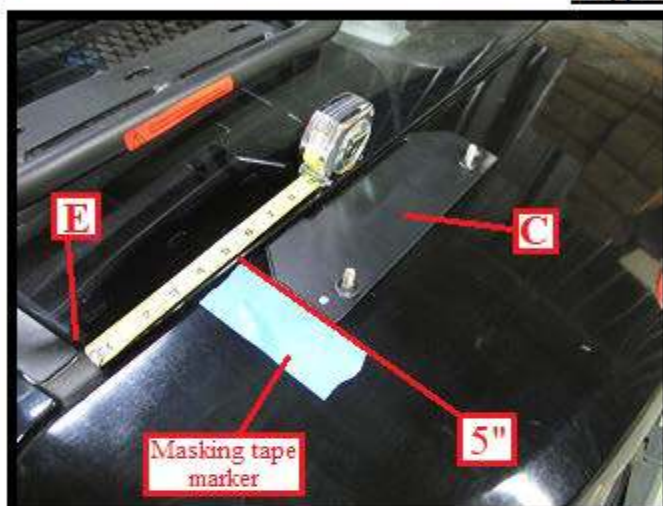
Letter	Description	Location	Quantity
A	GOBI JEEP RENEGADE REAR DOOR LADDER	Main box	1
B	LOWER LADDER CLAMP	strapped to ladder	1
C	LADDER HANGE PLATE	strapped to ladder	1
D	<p>GOBI LADDER MOUNTING HARDWARE</p> <p>CONTENTS: 2- 5/16" Nylock nuts SS  2- 5/16" Lock washer SS  2- 3/8" Flat washer SS  2- 10-32 x 5/8" Socket set cap screw SS  1- 3/16" Allen wrench  1-5/32" Allen wrench  1- 1/8" Allen wrench</p> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; padding: 2px; margin-right: 10px;"> 2- 5/16" x 1" Button head screws SS  2- 5/16" Flat washers SS  2- 5/16" Lock washers SS </div> <div> Pre-assembled to bottom of ladder </div> </div>	BAG #1	1



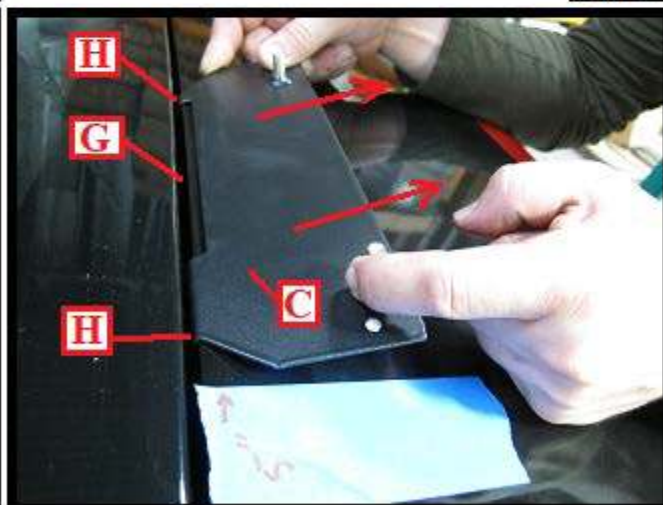
**CAUTION: USE ANTI-SEIZE LUBRICANT ON ALL SCREWS**



## GOBI JEEP RENEGADE 2015-19 REAR DOOR LADDER INSTALLATION INSTRUCTIONS

**Fig. 1****Fig. 2**

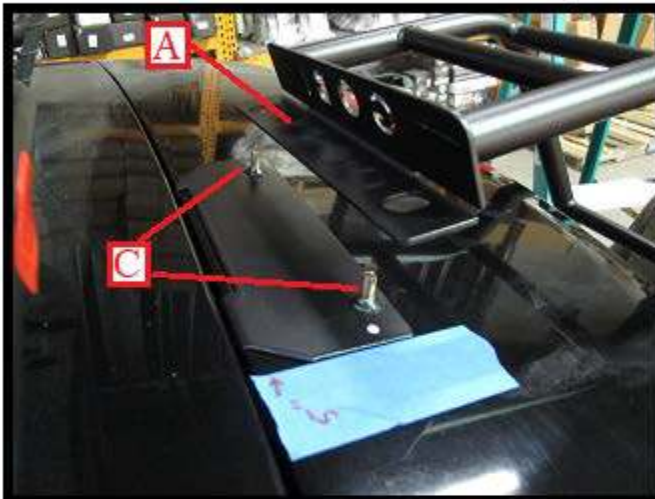
Remove hanger plate (C) from your hardware kit, as shown on parts page 3 and in Fig. 1 above. Do not remove the back adhesive protective tape cover at this time. As shown in Fig. 1, slip the hook ends (H) of the hanger plate (C) in the gap (G) between the door and body of the vehicle. Pull back as shown in Fig. 4 in the direction of the red arrows and slide hanger plate over 5" from the inside trim edge (E) as shown in Fig. 2. Place a piece of masking tape along the edge of hanger plate (C) as shown to mark the 5" measurement.

**Fig. 3****Fig. 4**

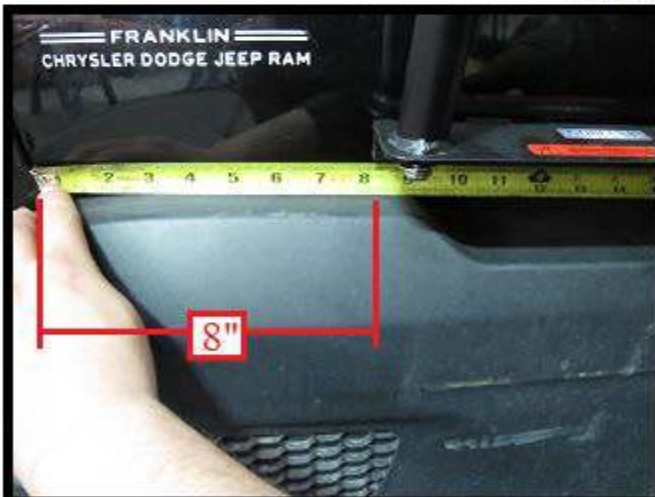
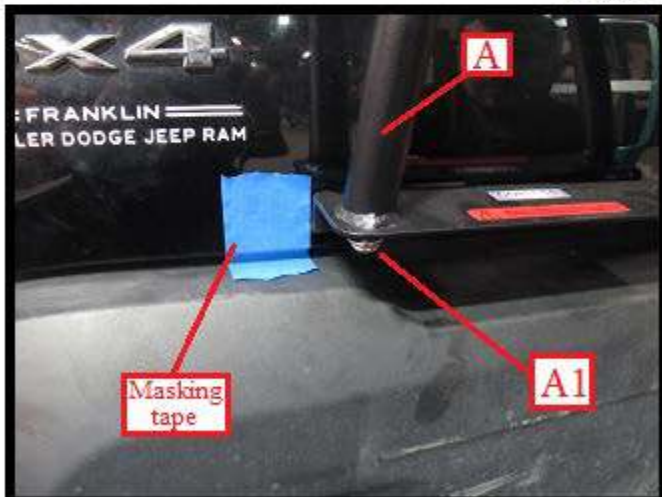
Remove hanger plate (C) from the door and clean the area where the hanger plate was seated with denatured alcohol. As shown in Fig. 3 remove the double back tape protective cover, then as shown in Fig. 4 slip hanger plate (C) back into gap (G) and align with the edge of the masking tape marker previously installed. Pull back as shown in Fig. 4 in the direction of the red arrows. While pulling back in the direction of the arrows, set hanger plate down onto the rear door and hold in place for 10 seconds. Hanger plate (C) inner hook (H) must be contacting the upper edge of the door as shown in Fig. 4.



## GOBI JEEP RENEGADE 2015-19 REAR DOOR LADDER INSTALLATION INSTRUCTIONS

**Fig. 5****Fig. 6**

As shown in Fig. 5 place ladder (A) onto hanger plate (C) studs. Rest the bottom of ladder (A) onto the base of the rear door shown in Fig. 6.

**Fig. 7****Fig. 8**

As shown in Fig. 7 measure from the bottom left side of the rear door 8" over and set the bottom left side corner of the ladder to match. As shown in Fig. 8 place a piece of masking tape on the door in line with the left edge of the ladder. Leave a small amount of tape hanging below the bottom edge to curl under the door. Remove the ladder and and both screws (A1) at this time. Place nearby as they will be needed soon.



## GOBI JEEP RENEGADE 2015-19 REAR DOOR LADDER INSTALLATION INSTRUCTIONS

**Fig. 9****Fig. 10**

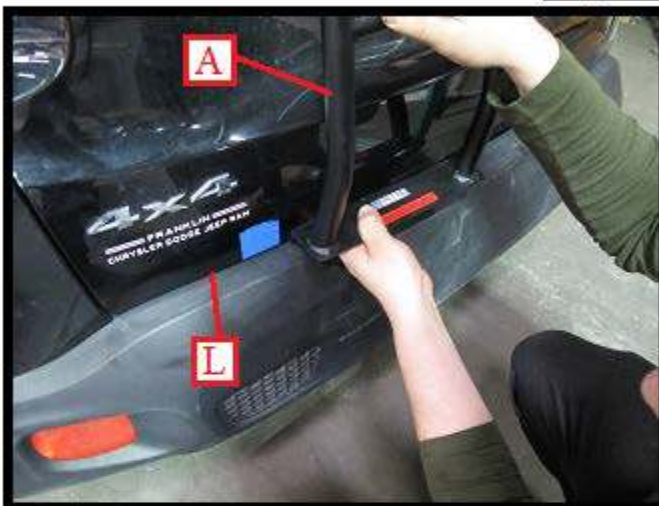
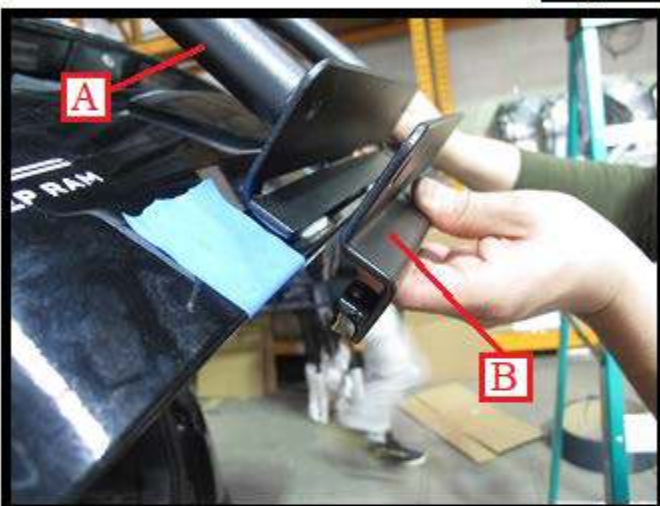
As shown in Fig. 9 clean the bottom of the door lip (L) with denatured alcohol. Remove pinch plate (P) from the lower ladder door clamp (B) shown on page 3 of your hardware list. Peel off the protective tape cover as shown in Fig. 9 and adhere pinch plate (P) even with the bottom door lip (L) and aligned with the masking tape marker as shown on Fig. 10.

**Fig. 11****Fig. 12**

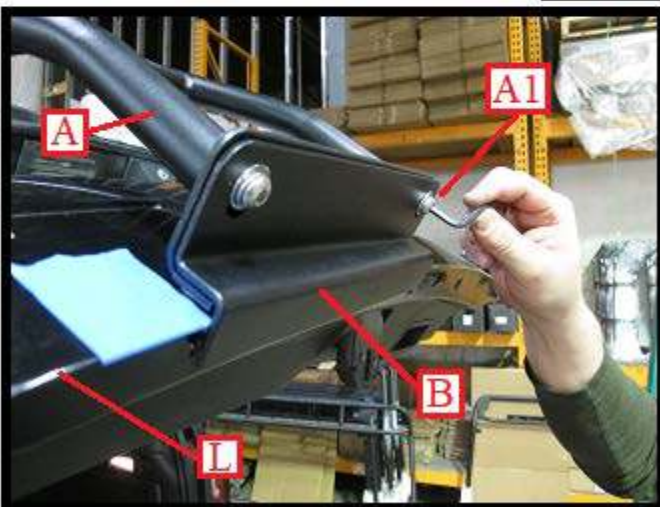
As shown in Fig. 11 remove the double back protective tape cover from the bottom of ladder (A). As shown in Fig. 12, place the ladder back onto hanger plate (C) and pull down firmly so the bottom of the ladder is even with the bottom of the door and in line with masking tape marker as shown in Fig. 13. Press firmly against the bottom.



## GOBI JEEP RENEGADE 2015-19 REAR DOOR LADDER INSTALLATION INSTRUCTIONS

**Fig. 13****Fig. 14**

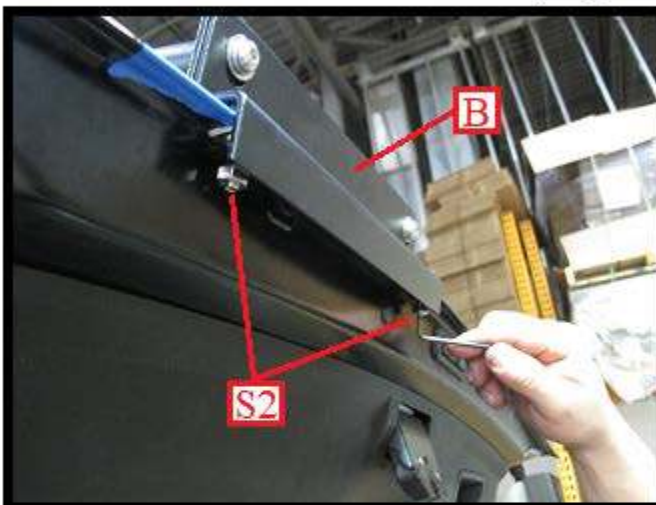
As shown in Fig. 13, align lower ladder (A) in line with the bottom of the door lip (L) and edge of masking tape marker and hold in place firmly for 30 seconds. As shown in Fig. 14 place lower clamp (B) onto the bottom of the ladder. Ladder (A) may move up a small amount prior to threading in screws (A1), this is normal.

**Fig. 15****Fig. 16**

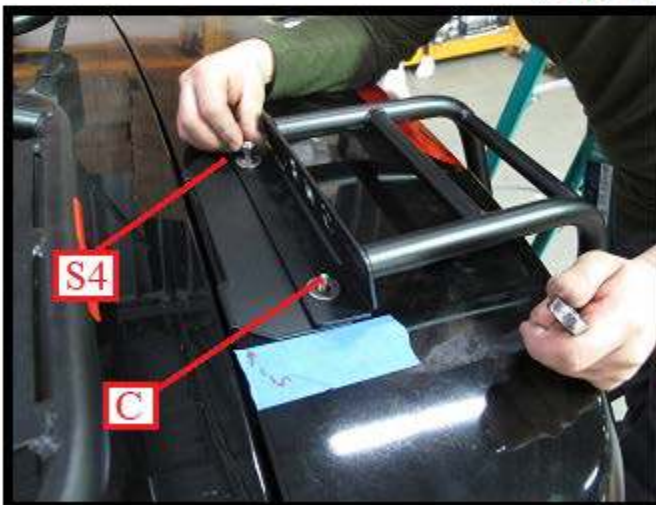
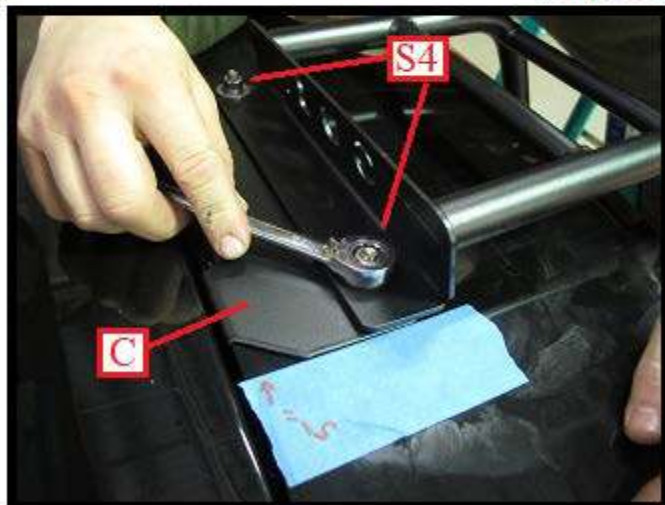
As shown in Fig. 15, while holding clamp (B) in place and in line with the bottom of ladder (A), thread in lower screws (A1) previously removed. Thread both screws (A1) in and fully hand tighten with a 3/16" Allen wrench supplied in Bag #1 as shown in Fig. 16. While tightening screws (A1), the lower ladder edge will align with the lower door lip (L).



## GOBI JEEP RENEGADE 2015-19 REAR DOOR LADDER INSTALLATION INSTRUCTIONS

**Fig. 17****Fig. 18**

As shown in Fig. 17, open the rear door fully. Remove a 1/8" Allen wrench located in Bag #1 and fully hand tighten both 1/4" Allen screws (S2) on the underside of clamp (B). As shown in Fig. 18, fully tighten both 1/4" nuts (S3) using a 7/16" open or closed end wrench.

**Fig. 19****Fig. 20**

As shown in Fig. 19, remove from Bag #1, 2- 3/8" flat washers and 2- 1/2" nylock nuts (S4). Thread both 3/8" flat washers and 1/2" nylock nuts onto hanger plate studs (C). As shown in Fig. 20 use a 1/2" open or closed end wrench to tighten down both nuts and washers (S4). **CAUTION:** DO NOT OVER TIGHTEN SCREWS.



## GOBI JEEP RENEGADE 2015-19 REAR DOOR LADDER INSTALLATION INSTRUCTIONS



**INSTALLATION COMPLETED**