


## GOBI FORD F-150 12TH GEN WIND DEFLECTOR INSTALLATION INSTRUCTIONS

### Included in kit

Letter	Description	Location	Quantity
A	WIND DEFLECTOR WITH RUBBER SEAL	Strapped to rack	1
B	WIND DEFLECTOR SUPPORT BRACKETS	Strapped to Wind deflector	3
C	WIND DEFLECTOR MOUNTING HARDWARE CONTENTS: 6- 1/4-20 x 3/4" SS Button head screw 12- Nylon black round flat washers 6- 1/4-20 SS Nylock nuts 1- 2" x 47" Wind deflector roof top clear tape 1- Package Anti-Seize lubricant	<b>BAG #2</b> Strapped to Wind deflector	1

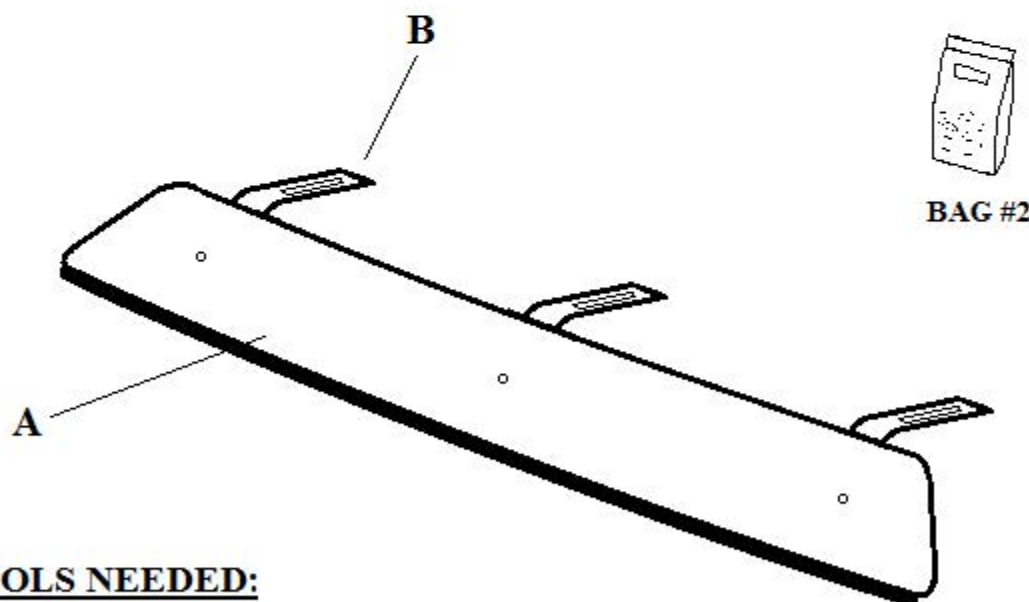

### TOOLS NEEDED:


- 1- 7/16" BOX END WRENCH
- 1- 5/32" ALLEN WRENCH
- 1- 1" WIDE MASKING TAPE

**CAUTION: USE ANTI-SEIZE LUBRICANT ON ALL SCREWS**

## GOBI FORD F-150 12TH GEN WIND DEFLECTOR INSTALLATION INSTRUCTIONS

**CAUTION: USE ANTI-SEIZE LUBRICANT ON ALL SCREWS**

**Fig. 1**

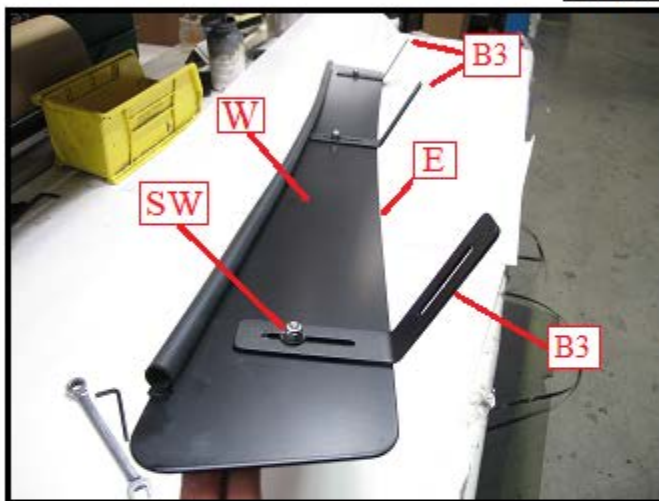

Place a blanket or soft material on a flat surface to place wind deflector (W) onto, this will prevent marring of the front surface. Make sure to use wind deflector support brackets (B3) located in Bag #2. Install all 3 (B3) brackets on the wind deflector as shown in Fig. 40, equal to the top edge (E) of the wind deflector. Using 3- 1/4-20 x3/4" button head screws, 6- 1/4" black nylon washers and 3- 1/4" nylock nuts (SW) located in Bag #2. Secure each bracket in place with a 7/16" box end wrench and supplied 5/32" Allen wrench.

**Fig. 2**



**Fig. 3**




**Fig. 4**




As shown in Fig. 2 clean the roof top in front of the roof rack with denatured alcohol or similar cleaner which does not contain ammonia. As shown in Fig. 3 set the wind deflector (W) onto the roof top and center slot of roof rack light mount plate (L). Using 1- 1/4-20 x 3/4" button head screw, 2- 1/4" black nylon washers and 1- nylock nut (SW) from Bag #2, attach the center wind deflector support bracket (B3) to the center slot of the light mount plate (L) even with the back edge (E) as shown in Fig. 4. Fully tighten in place with a 7/16" box end wrench and supplied 5/32" Allen wrench and move on to page 14 Fig. 5.

# GOBI F-150 12TH GEN CREW CAB STEALTH ROOF RACK

## INSTALLATION INSTRUCTIONS

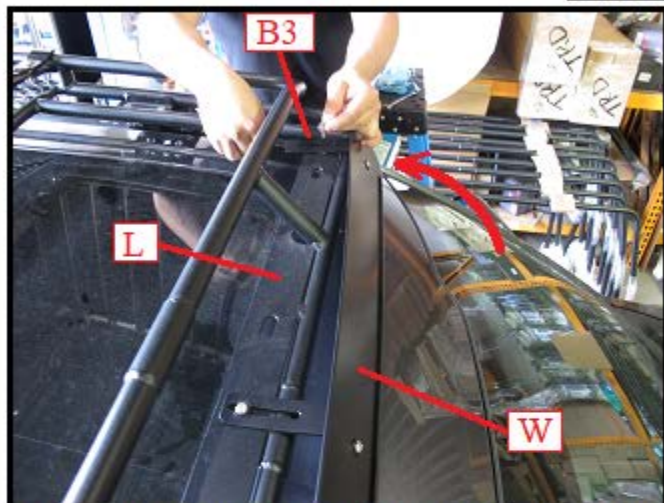**Fig. 5****Fig. 6**

As shown in Fig. 5, pull back wind deflector towards the roof rack in the direction of the large red arrow. Support bracket (B3) will sit at a slight angle on mount plate (L), this is normal. Push down through support bracket (B3) 1- 1/4-20 x 3/4" button head screw and 1- 1/4" black nylon washer and thread on from the underside of mount plate (L) 1- 1/4" black nylon washer and 1- 1/4" nylock nut. Snug down in place but do not fully tighten. Slide support bracket (B3) in the direction of the small red arrow in towards the center of the vehicle as shown in Fig. 6, causing the wind deflector (W) to bow. Then fully tighten bracket (B3) in place using a 7/16" box end wrench and supplied 5/32" Allen wrench.

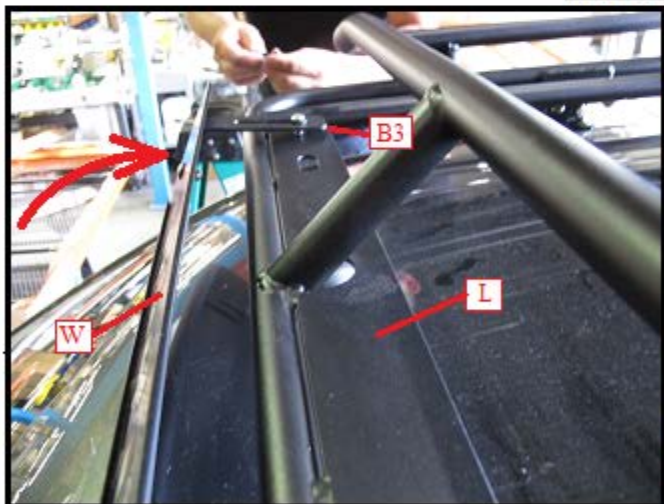**Fig. 7****Fig. 8**

As shown in Fig. 7 and Fig. 8, pull back wind deflector towards the roof rack in the direction of the large red arrow. Support bracket (B3) will sit at a slight angle on mount plate (L), this is normal. Push down through support bracket (B3) 1- 1/4-20 x 3/4" button head screw and 1- 1/4" black nylon washer and thread on from the underside of mount plate (L) 1- 1/4" black nylon washer and 1- 1/4" nylock nut. Snug down in place but do not fully tighten. Slide support bracket (B3) in the direction of the small red arrow in towards the center of the vehicle as shown in Fig. 8 causing the wind deflector (W) to bow. Then fully tighten bracket (B3) in place using a 7/16" box end wrench or supplied 5/32" Allen wrench.

## GOBI F-150 12TH GEN CREW CAB STEALTH ROOF RACK INSTALLATION INSTRUCTIONS

**Fig. 9****Fig. 10**

Fig. 9 shows wind deflector (W) properly installed. As shown in Fig. 10 place a 1" wide strip of masking tape (T) or the like approximately 1" below the edge of the wind deflector where it contacts the roof top and 1" or so past the length of the rubber gasket (R) both ends. Once you have adhered the masking tape marker in place, completely remove the wind deflector from the mounting plate (L) at this time.

**Fig. 11****Fig. 12**

Remove a white roll of clear tape from Bag #2. Peel away a small amount of the white protective backing and adhere the clear tape as shown in Fig. 11 and Fig. 12 to the roof top along the upper edge of the masking tape marker. Use the palm of your hand in a flat action and press the clear wear tape to the roof top as shown, fully across the top of the masking tape marker and 1" or so beyond the ends.

## GOBI F-150 12TH GEN CREW CAB STEALTH ROOF RACK INSTALLATION INSTRUCTIONS

**Fig. 13**

Cut clear tape approximately 1" or so past the masking tape maker both ends as shown in Fig. 13 then press clear tape to roof top.

**Fig. 14**

Re-install wind deflector as previously shown in Fig. 4 thru Fig. 9. Figure 14 shows a properly installed wind deflector.



### INSTALLATION COMPLETED